



*User's guide*

**OPUS Eurocut A4**

***Basic safety precautions:***

- Cutting machines are designed only for cutting paper.
- The machine should be placed out of children's reach.

**\* The machine is intended for cutting paper only. Untypical paper (e.g. coated paper, chalked paper) or cardboard should be cut one by one.**

**\* Trimmers were tested on 70g/m<sup>2</sup> paper, A4 format**

***Instalation:***

Put the trimmer on a firm, solid surface and mount plastic blade guard before use. To install the blade guard, unscrew two bolts placed on a cutting strip and put the plastic blade guard on the pins ( blade guard should be slipped in blade guide, parallel to the blade). Then put and tighten two enclosed screws.

***Operation:***

Lift the blade up and slide the paper to be cut. Moveable sidegauge and backgauge adjust paper to desired position. Press the paper to the base with your hand and put the blade down.

***Technical Data:***

Cutting machine OPUS EURO CUT A4 cuts up to 8 sheets

Cutting length: 335mm

Equipped with blade guard and moveable sidegauge

Dimensions: 260 x 270 x 340 mm (H x W x D)

Net weight: 1,6 kg

Gross weight: 1,9 kg